

# 652331  
4+

# EYECLOPS™ DIGITAL MICROSCOPE & CAMERA™


Adult Supervision Suggested  
**WARNING:** CHOKING HAZARD - Small parts. Not for children under 3 years.  
**ATTENTION:** DANGER D'ÉTOUFFEMENT - Petits éléments. Ne convient pas aux enfants de moins de 3 ans.

**INCLUDES:**  
1 EyeClops™ Digital Microscope & Camera™, 1 USB Cord, 512MB Micro SD Card


## BATTERY INSTALLATION

ADULT INSTALLATION REQUIRED  
Requires 4 "AA" (LR06/R6) Alkaline Batteries (not included).  
When performance diminishes, replace with fresh batteries.

1. Locate the BATTERY COVER.
2. Using a Phillips Head screwdriver (not included), loosen the SCREW and remove the BATTERY COVER.
3. Install 4 "AA" (LR06/R6) ALKALINE BATTERIES.
4. Replace the BATTERY COVER and tighten the SCREW.

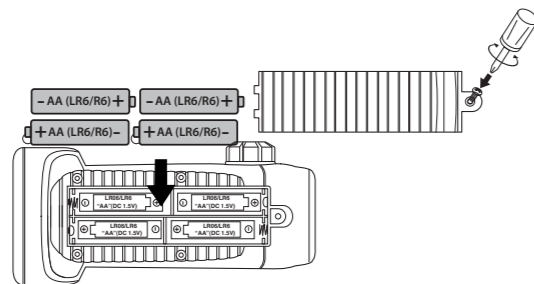


## FUNCTION

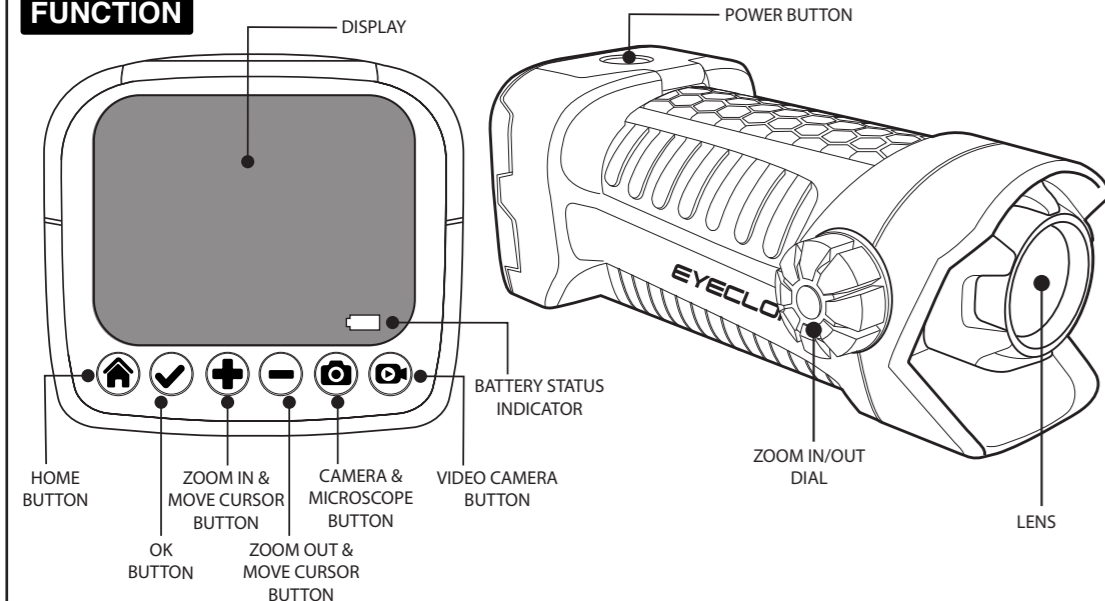

## MICRO SD CARD INSTALLATION

- Make sure the EyeClops™ is turned OFF.
  - Lift the cover up on TOP of EyeClops™.
  - Locate the Micro SD Card slot.
  - Insert included memory card with label facing the display.
- Note: Media won't be saved unless memory card is installed.**
- To remove Micro SD Card, make sure the EyeClops™ is turned OFF and press down on Micro SD Card and it will pop up, then pull out.

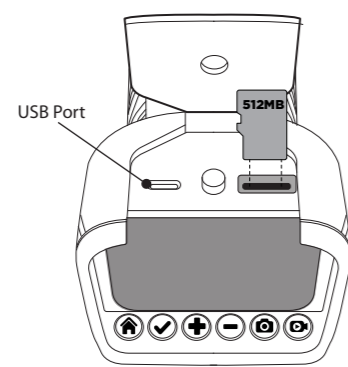


EyeClops™ supports the following Micro SD Cards up to 32GB:




## HOW TO OPERATE


1. Press once to turn ON.  
• Press and hold for 2 Seconds to turn OFF.

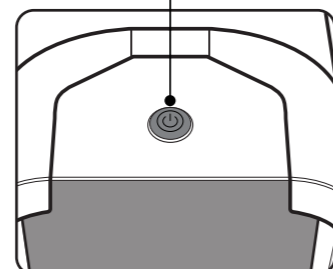


3. Rotate the ZOOM IN/OUT DIAL clockwise and counterclockwise to magnify object and focus image on screen.  
\*Up to 800x magnification with 3x digital zoom.  
Maximum magnification power based on 15" computer screen.

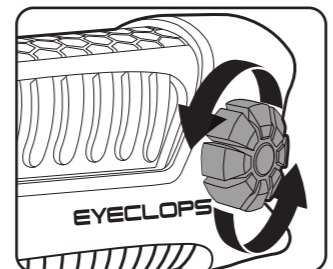


5. Press to take PHOTO.  
• Press once to enter recording mode. Press again to START RECORDING VIDEO. Press again to STOP RECORDING.

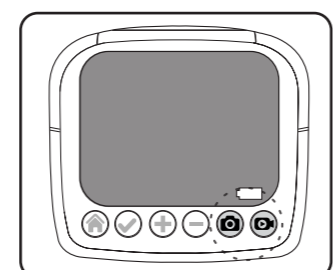


2. Hold the EyeClops™ lens over the object you want to view.

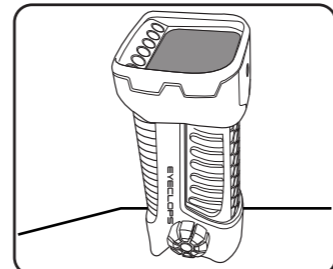

4. +: Press to ZOOM IN & MOVE CURSOR.  
-: Press to ZOOM OUT & MOVE CURSOR.

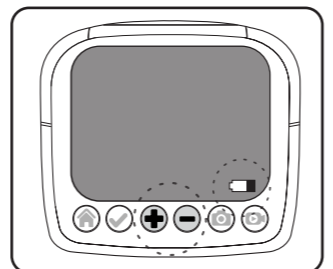

6. Home: Press for SETTINGS.  
Checkmark: Press to OK.  
Battery icon: When screen shows Low Battery icon. Replace with fresh batteries.

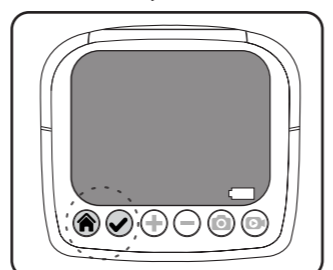

## TROUBLESHOOTING

1. EyeClops™ won't save Photos/Videos without a Micro SD Card inserted.
2. If image is not taken clearly:
  - Check the EyeClops™ is being held steadily.
  - Make sure the lighting conditions are good.
3. To return back to MICROSCOPE mode, press CAMERA & MICROSCOPE button.
4. To return back to VIDEO CAMERA mode, press VIDEO CAMERA button.
5. If EyeClops™ stops working, take batteries out and then replace. Then turn back ON. If still not working, then replace with fresh batteries..



## SETTINGS

NOTE: For additional information on other SETTINGS and FEATURES, visit [www.jakks.com/eyeclops](http://www.jakks.com/eyeclops). Ask a parent before going online.

Use (+) (-) buttons to move cursor. To exit PRESS (Home).

### LANGUAGE


1. Press (Home) to enter the feature menu.  
• Move cursor over the SETTINGS icon.  
• Press (Checkmark) to select SETTINGS icon.
2. Move cursor over the LANGUAGE icon, PRESS (Checkmark) button.  
• Press (+) (-) buttons to scroll through LANGUAGES.  
• Select the LANGUAGE of choice then PRESS (Checkmark) button.

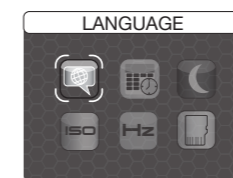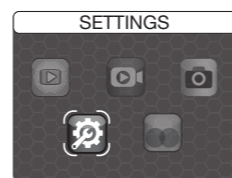

## FEATURES


### VIEW IMAGES & VIDEOS

1. Press (Home) to enter the feature menu.  
• Move cursor over the MEDIA icon.  
• Press (Checkmark) to select MEDIA icon.
2. Move cursor over the PHOTOS/ VIDEO icon, PRESS (Checkmark) button.  
• Press (+) (-) buttons to scroll through media.  
• Press (Checkmark) button to PLAY and STOP VIDEO.

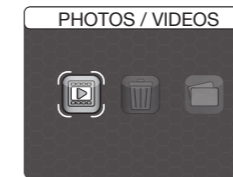



### DELETE IMAGES & VIDEOS

1. Press (Home) to enter the feature menu.  
• Move cursor over the MEDIA icon.  
• Press (Checkmark) to select MEDIA icon.
2. Move cursor over the DELETE icon, PRESS (Checkmark) button.  
• Press (+) (-) buttons to scroll through media.  
• To DELETE PRESS (Checkmark) button. Then follow directions on display.


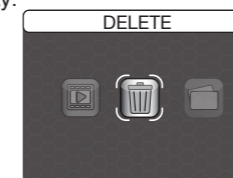


### FILTERS

1. Press (Home) to enter the feature menu.  
• Move cursor over the FILTER icon.  
• Press (Checkmark) to select FILTER icon.
2. Press (+) (-) buttons to move cursor over the FILTER options.  
• Press (Checkmark) button to select FILTER.  
• To change FILTER repeat STEP 1 & 2.

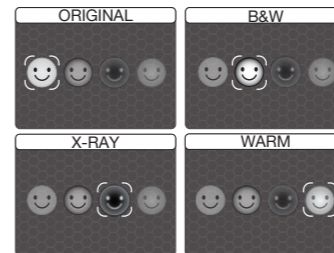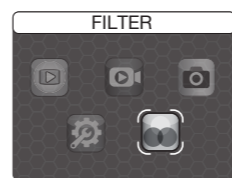

## SHARE YOUR DISCOVERIES

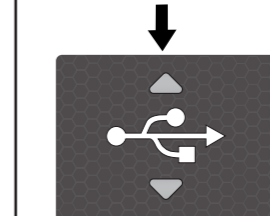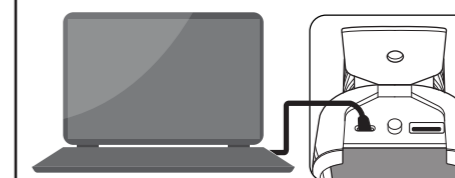

When USB icon is displayed on EyeClops™ display PRESS (Checkmark).

## TRANSFER IMAGES & VIDEO

1. Turn the EyeClops™ OFF before connecting to a computer.
2. Lift up COVER to reveal the USB PORT.
3. Insert the small end of the USB Cord (included) into the USB port on the camera.
4. Insert the larger end of the USB Cord (included) into a USB port on the computer.
5. When USB icon is displayed on EyeClops™ display PRESS (Checkmark).
6. On your computer, locate and open the "DCIM" folder in the removable drive.

**NOTE:** When the EyeClops™ is connected to your computer, do not remove the Micro SD Card and do not disconnect the camera while the files are downloading. After you have finished, unplug the EyeClops™ from your Computer.

**SYSTEM REQUIREMENTS:**  
• Microsoft® Windows® 7, Windows® 8 or Windows® 10.  
• Operating System or Mac with OS X version 10.12, 10.13, 10.14 or 10.15

For more fun features: Visit [www.jakks.com/eyeclops](http://www.jakks.com/eyeclops) for more information. Ask a parent before going online.

## Battery Safety Information

**WARNING!** Battery acid leakage can cause personal injury and cause damage to the product and surrounding property. If battery leakage occurs, thoroughly wash any affected skin, making sure to keep battery acid away from eyes, ears, nose and mouth. Immediately wash any clothing or other surface that comes in contact with leaked battery acid. Leaking batteries may make "popping" sounds. Always remove replaceable batteries before disposing product.

Dispose batteries or products with non-replaceable batteries according to Local, State or Federal Battery and Recycling Laws.  
**TO AVOID BATTERY PROBLEMS:**  
NEVER mix old and new batteries or different brands of batteries.  
NEVER mix alkaline, standard (carbon-zinc), rechargeable batteries with this product.  
NEVER dispose of batteries in fire, as they may leak and explode.  
ALWAYS remove exhausted batteries from toy.  
ALWAYS have an adult install batteries consistent with installation instructions.  
ONLY use batteries specified by manufacturer.  
Batteries are to be inserted with the correct Polarity (+ and -).  
The supply terminals are not to be short-circuited.  
Non-rechargeable batteries are not to be recharged.  
Rechargeable batteries are to be removed from the toy before being charged.  
Rechargeable batteries are only to be charged under adult supervision.

## FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B)

©2020 and manufactured for / fabriqué pour JAKKS PACIFIC, INC., 2951 28TH ST., SANTA MONICA, CA 90405 USA.

® and/™ designate U.S. trademarks of / désignent les marques déposées de JAKKS Pacific. Other trademarks used under license / Autres marques déposées utilisées sous licence. MADE IN CHINA. FABRIQUE EN CHINE.

Imported into / importé dans EU by JAKKS Pacific (UK) Ltd., 1 Arlington Square, Downshire Way, Bracknell, Berkshire RG12 1WA, GB and JAKKS Pacific Germany GmbH, Lindenstraße 26a, D-91126 Schwabach, DE.

www.jakks.com www.jakks.com/warranty consumers@jakks.com

North America / Amérique du Nord: 1.877.875.2557 or 1.909.594.7771

United Kingdom / Royaume-Uni: 00.44(0)1344.638909

Colors & decoration may vary. Retain packaging/instructions for reference. / Les couleurs et le décoration peuvent varier par rapport aux illustrations. Conserver l'emballage/instructions pour toute référence.

Remove all packaging before giving toy to child. / Enlever le jouet de l'emballage avant de le donner à un enfant.

**WARNING!** Small Parts. Choking Hazard. **ATTENTION!** Petits éléments. Danger d'étouffement.

